



### Original Fender® Amp

Set screw except where noted.

<b>P-K314</b>	Skirted, 1-10	Pkg of 6
<b>P-K315</b>	White Vintage	Pkg of 6
<b>P-K316</b>	Brown Vintage	Pkg of 6
<b>P-K318</b>	Chicken head, black	Pkg of 6
<b>P-K319</b>	Skirted Roc Pro, black, push on	Pkg of 6
<b>P-K320</b>	Red Pointer, push on	Pkg of 6
<b>P-K321</b>	Black Pointer, push on	Pkg of 6



### Original Fender® Guitar

<b>P-K330</b>	For Strat, 1 volume, 2 tone, white	
<b>P-K331</b>	For Strat, 1 volume, 2 tone, black	
<b>P-K330-AG</b>	For Strat, 1 volume, 2 tone, aged white	
<b>P-K332</b>	For Tele, chrome dome, <b>set screw</b>	Pkg of 2
<b>S-H106</b>	Set screws for above knob	Pkg of 12
<b>P-K337</b>	Strat switch tip, aged white	Pkg of 2
<b>P-K335</b>	Strat switch tip, white	Pkg of 2
<b>P-K336</b>	Strat switch tip, black	Pkg of 2
<b>P-K334</b>	Tele switch tip, black	Pkg of 2
<b>P-K338</b>	Tele "Top Hat" tip, black	Pkg of 2
<b>P-K350</b>	Tele/P-Bass Barrel, chrome	Pkg of 2
<b>P-K351</b>	J-Bass knob set, black	Pkg of 3



### Retro-fit for Fender® Guitar

<b>P-K522</b>	Strat, 1 volume, 2 tone, black	
<b>P-K523</b>	Strat, 1 volume, 2 tone, cream	
<b>P-K524</b>	Strat, 1 volume, 2 tone, white	
<b>P-K526</b>	Strat, switch tip, black	Pkg of 3
<b>P-K527</b>	Strat, switch tip, cream	Pkg of 3
<b>P-K525</b>	Tele, chrome dome, <b>knurled</b>	Pkg of 2
<b>P-K528</b>	Tele, switch tip, black	Pkg of 3